
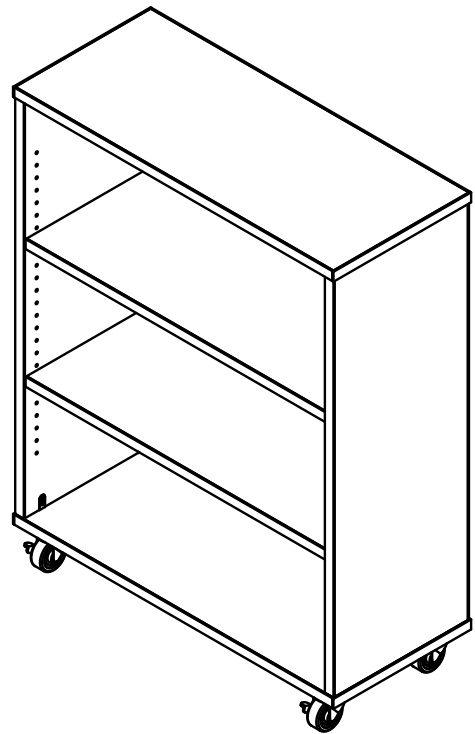


## Installation Instructions


# Blueridge

Mobile Shelving

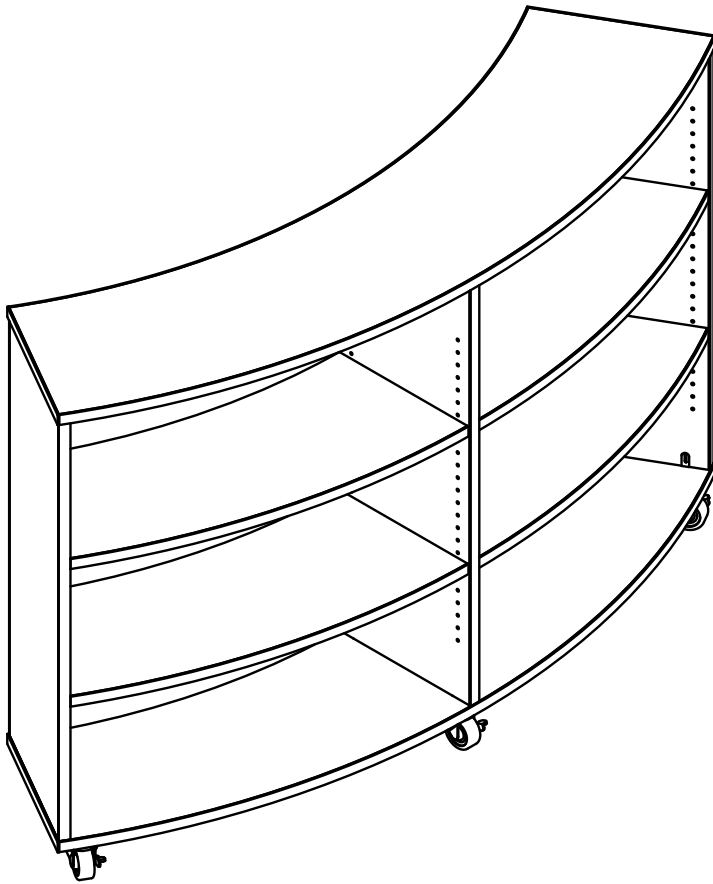


## You should have


See unit schedule for actual quantities.

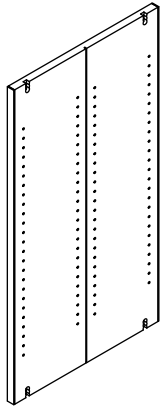


end panels

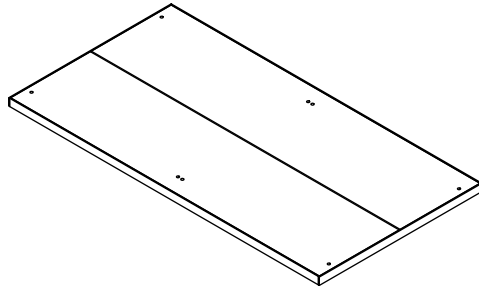

horizontal panels

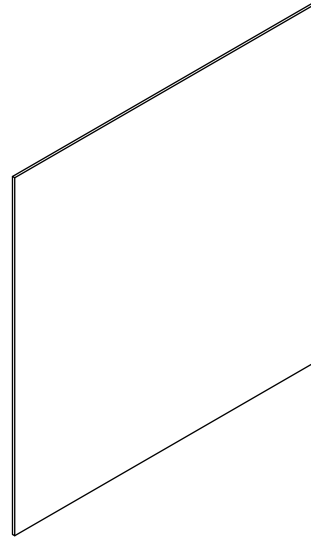


back panel

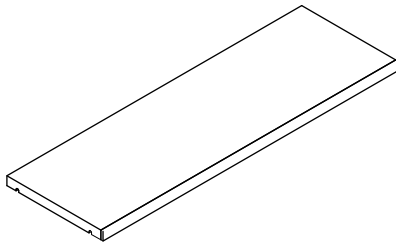


shelf



shelf pin  
#44960

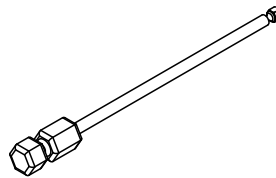


install tool  
#44966

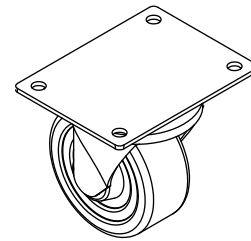


caster  
#44959


## You might have

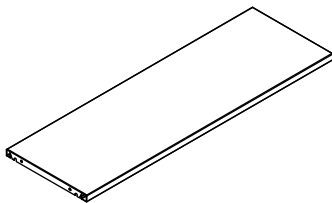


metal shelf

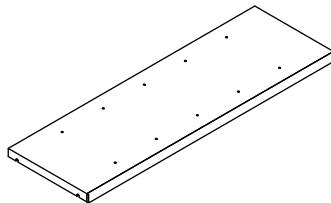


picture book shelf

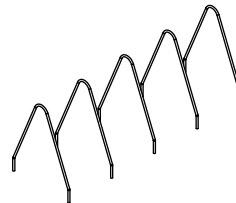


picture book divider  
#44961

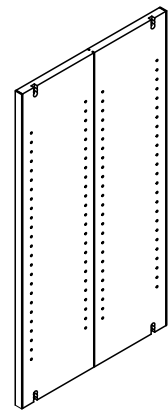


intermediate panels



shelf lock bracket  
#44965



#10 x 5/8" screw  
#1941010




#10 x 3/4" screw  
#44692



star washer  
#44898

## Shelf Details

The following images are provided as a reference to show the typical spacing/details and number of shelves for each of our standard heights.

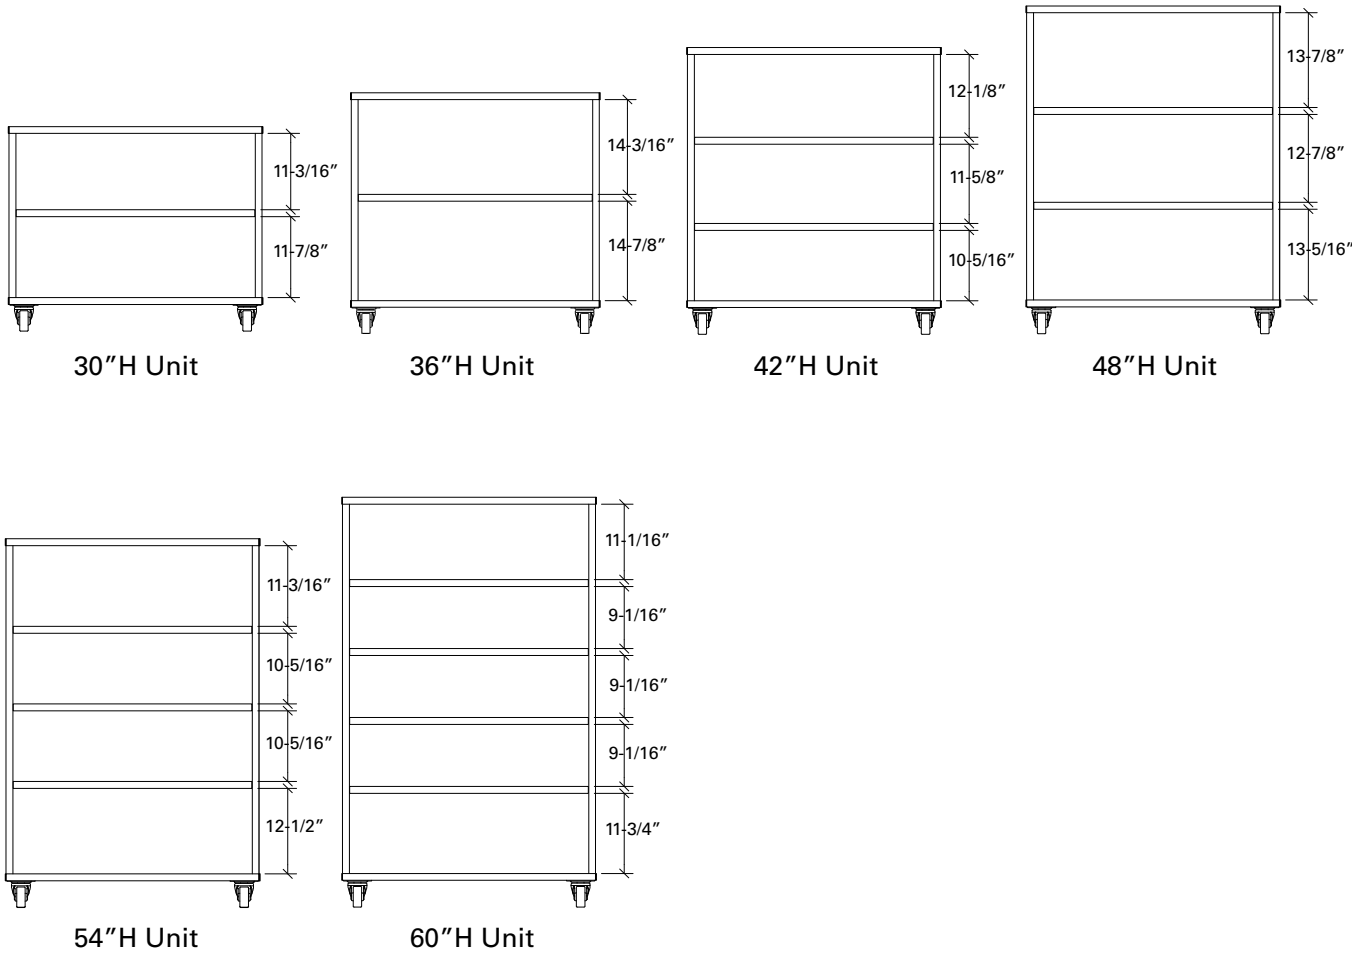

## Core Parts Assembly


1

### BOTTOM PANEL


- Use either horizontal panel; turn so insert holes are on other side.
- There are no pilot holes for casters.

### CASTERS

- Install casters to the bottom side using 3/4" screws #44962 and star washers #44898.
- **NOTE:** See unit schedule for required casters on your unit.

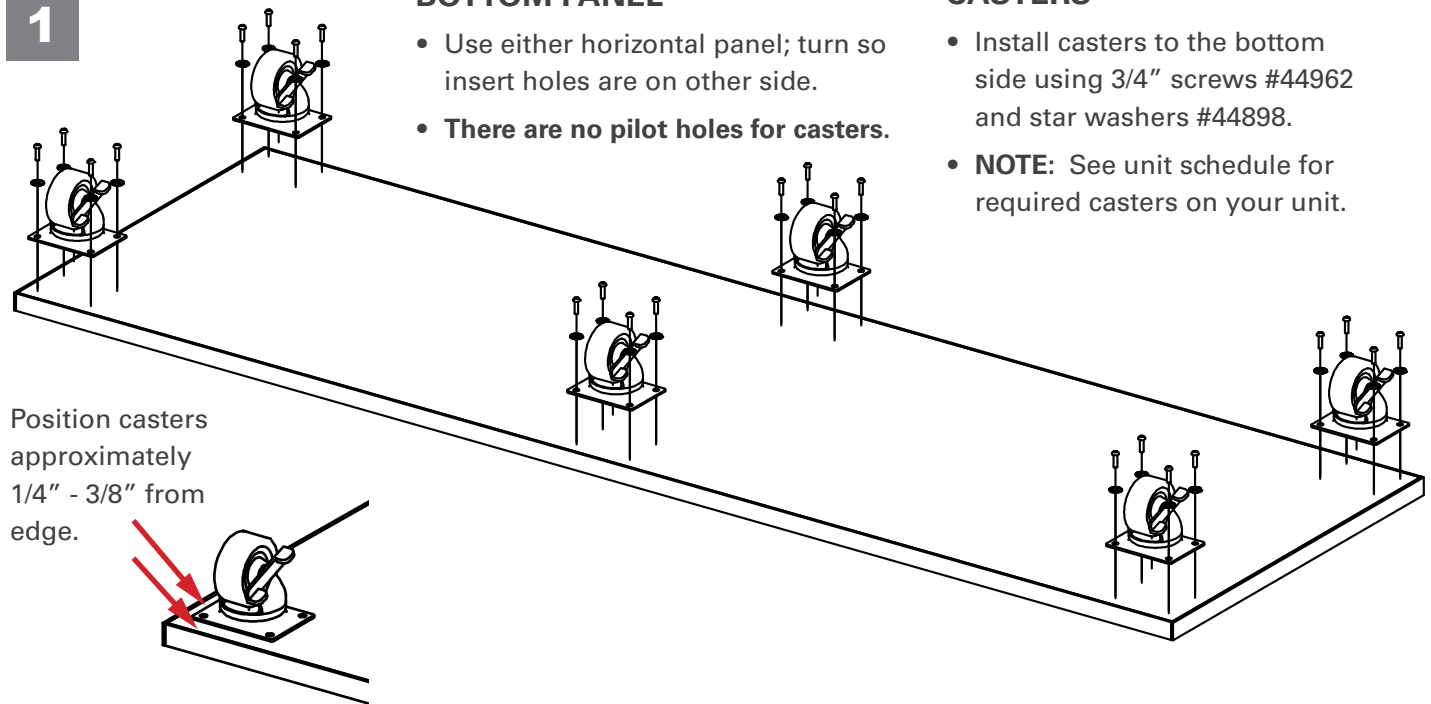


2

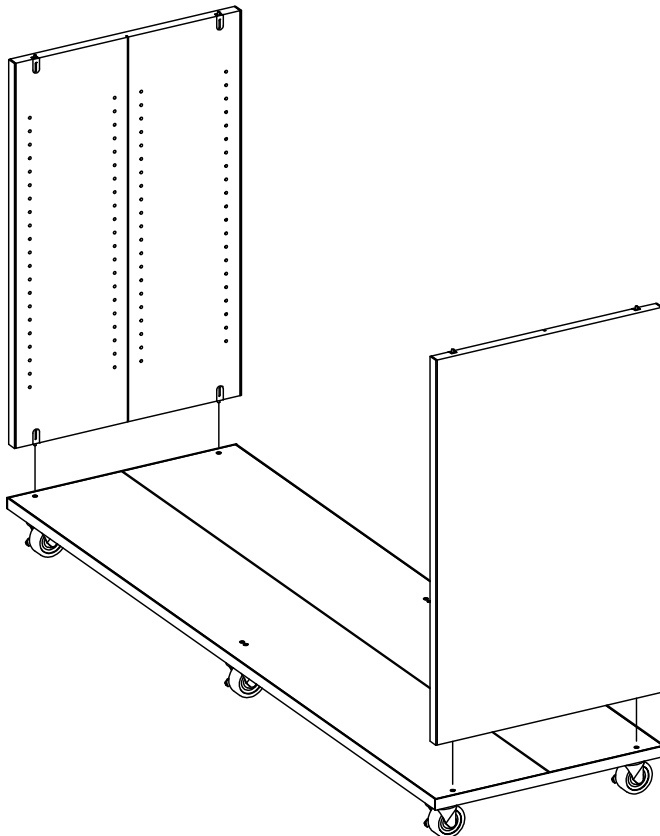

### END PANELS


- Position vertical end panel to align cam locks.
- Use the install tool #44966 to lock the pre-installed recessed cam locks in the end panels to the bottom panel with casters.

3

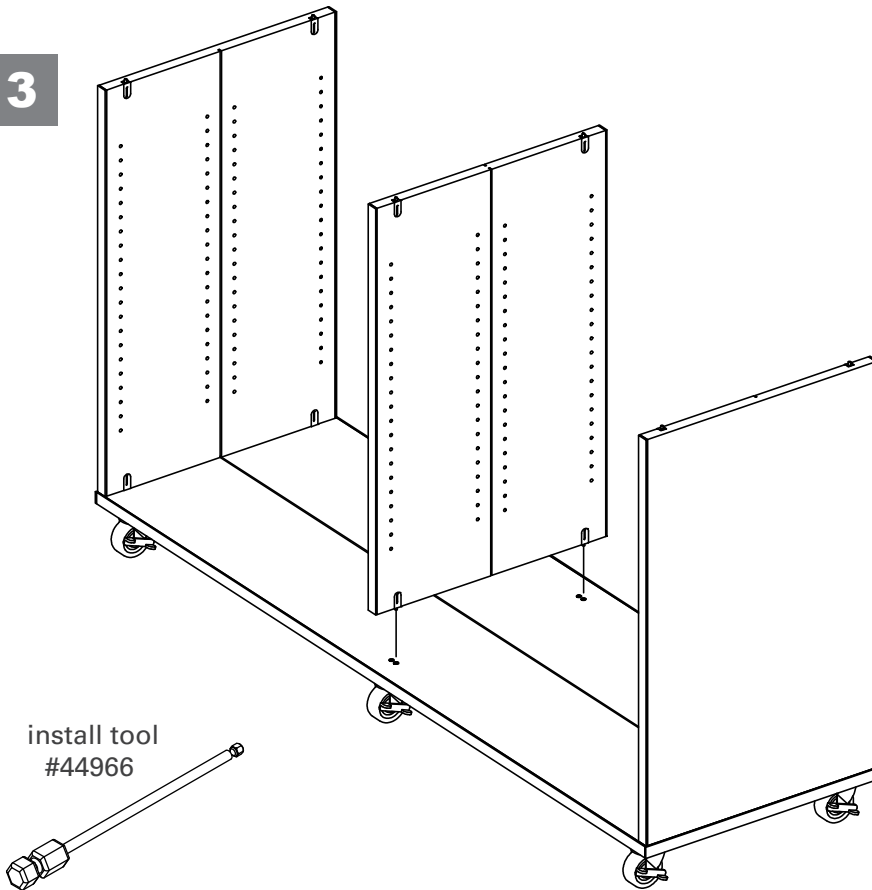


### POSITIONING THE INTERMEDIATE PANEL

- The center panels are built to work in any position top or bottom, so there are more holes drilled than will be used.
- Observe the location of the white insert on the panel. Left or right, the insert on the center panel will face white insert on the side panel.
- Choose the hole that is closest to the side that has facing inserts.
- Position center panel to cover the extra holes. Tighten the cam lock to position the center panel in place.
- NOTE: Intermediate panel is flippable; only 2 inserts in the horizontal panel get used. No part of either brass insert should be visible when installed correctly.

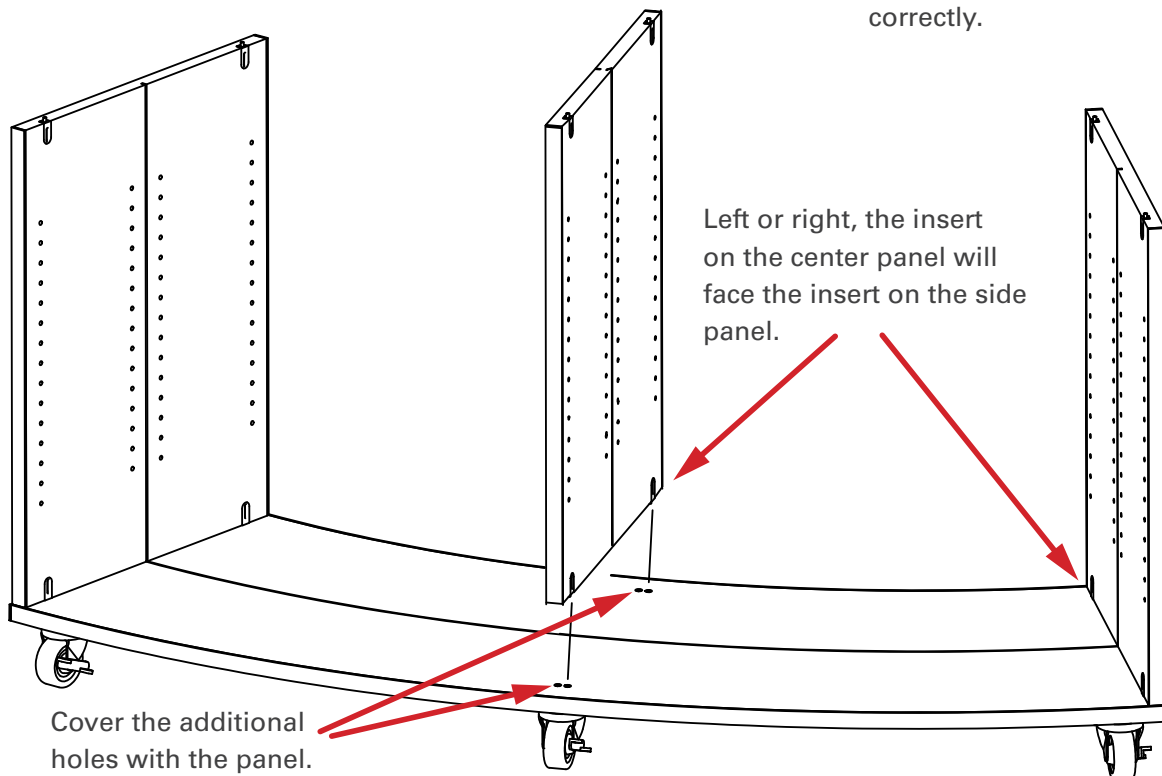


4

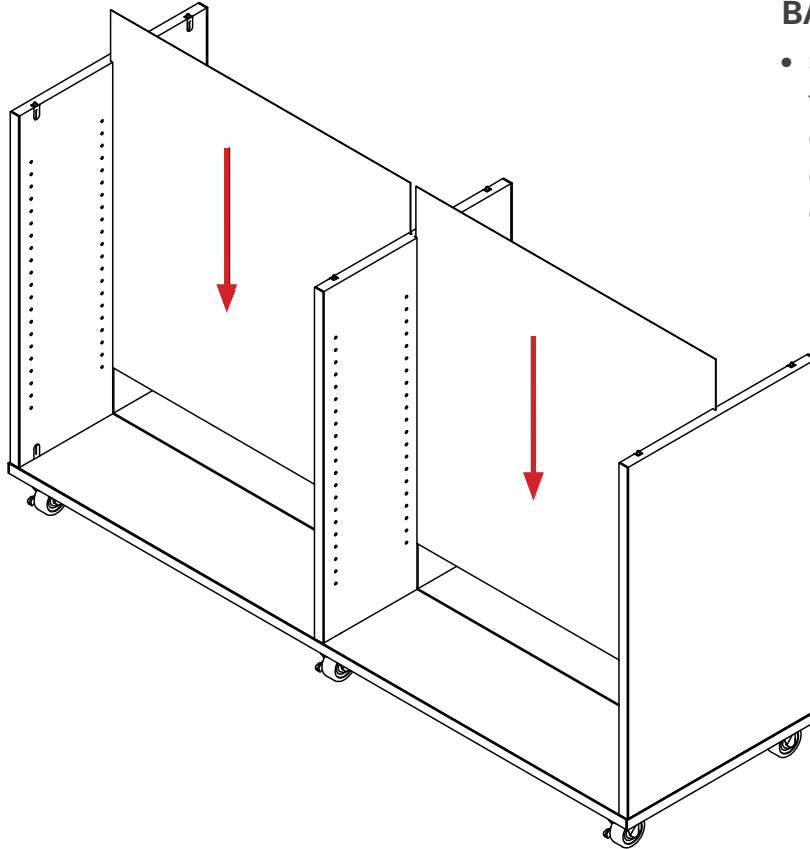

### BACK PANEL(S)

- Slide the back panel(s) into the pre-routed grooves in the end and intermediate panels, dropping into the pre-routed groove in the bottom horizontal panel.


5

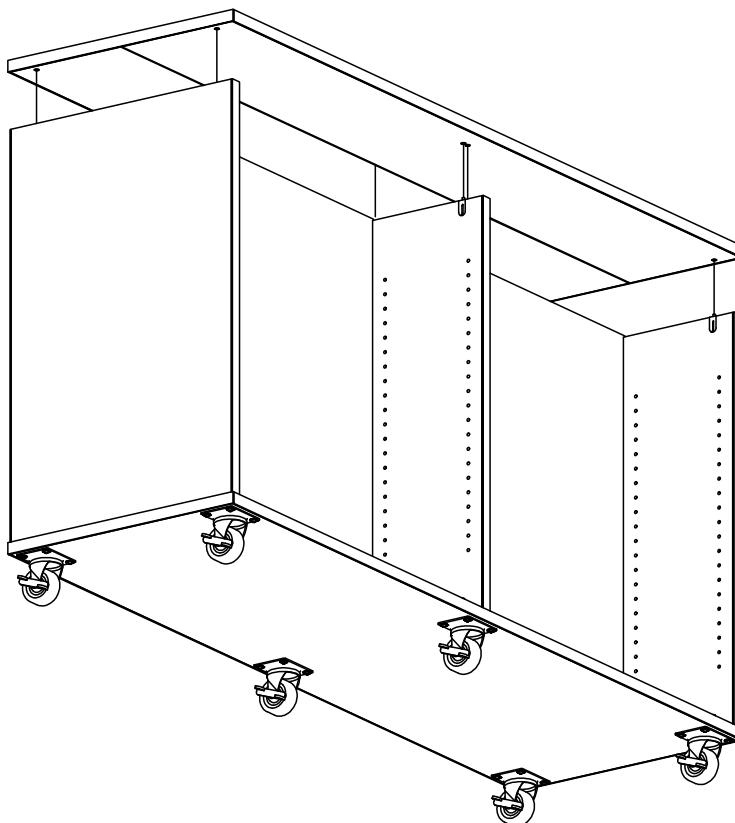

### TOP HORIZONTAL PANEL

- Use the install tool #44966 to attach the pre-installed recessed cam locks in the end panels and intermediate panel to the top horizontal panel. Ensure the back panel fits in the pre-routed groove.


6

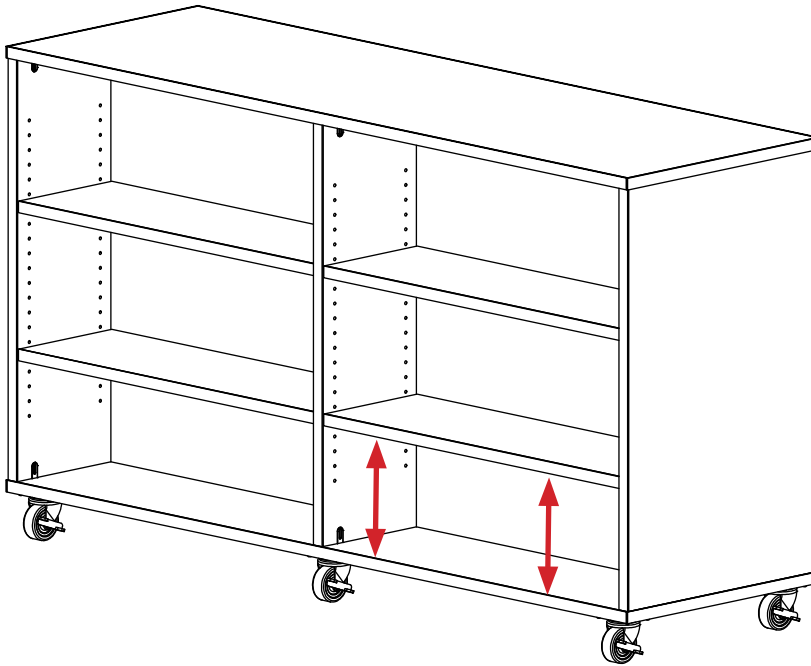

## SHELVES

- Install all shelves with desired spacing collared shelf pins #44960.
- Install shelves with equal spacing.

7

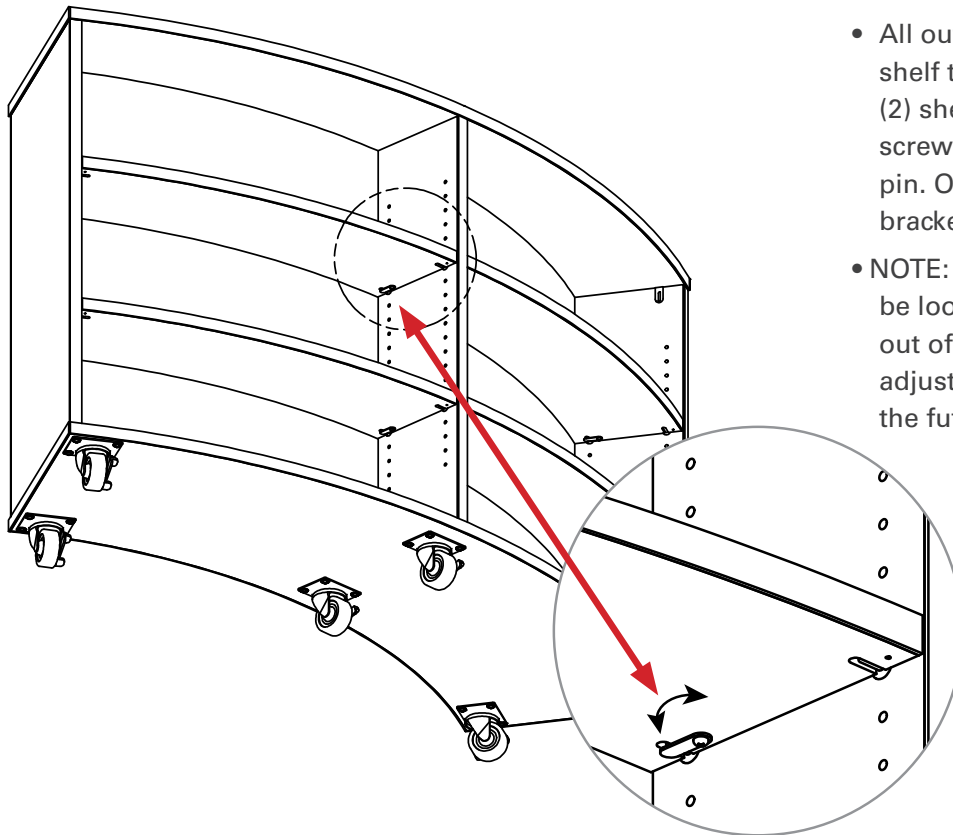

## SHELF LOCK BRACKET

- All outer curve shelves require a shelf to be locked in by means of (2) shelf lock brackets #44965 and screws #1941010 on the **BACK** shelf pin. Only use one hole to allow bracket to pivot.
- NOTE: Shelf lock brackets should be loose enough to freely rotated out of the way should shelf adjustments need to be made in the future.

palmerHAMILTON

143 S. Jackson Street  
Elkhorn, WI 53121-1911

Toll Free: 800-788-1028  
Local: 262-723-8200  
Fax: 262-723-5180

[www.PalmerHamilton.com](http://www.PalmerHamilton.com)

Visit our website to see the complete family of PalmerHamilton products.