


⚠ WARNING

These units should be operated only by authorized adults who have read and understand these operating instructions. Movement and/or operation of these tables by children could result in serious injury! It is dangerous to leave children unattended in the area of folded tables. Do not use tables as room dividers. To avoid table tipping over, push from end of table; DO NOT push from side. If necessary to replace or repair leg assemblies, contact Palmer Hamilton. Legs contain torsion bars under rotational force that can be hazardous and could result in serious injury if released without following proper procedures. Do not sit or stand on tabletops. Do not stand on stools or benches.

MOVING THE TABLE

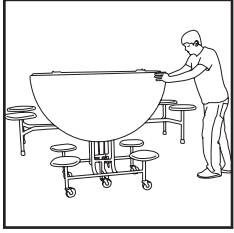

CORRECT WAY
To avoid table tipping over, push from the end of the folded table, facing the Center Lock Rod.




INCORRECT WAY
Pushing from the flat table side may cause tipping.


MAINTENANCE TIPS

1. Lubricate up and down latches on a regular basis.
2. Lubricate all pivot points as required.
3. Check nuts and bolts on a regular basis.
4. Use mild soap and water, damp sponge for general cleaning. For tougher stains, visit wilsonart.com.
5. **DO NOT** power wash!


TO OPEN TABLE FOR IN-USE POSITION

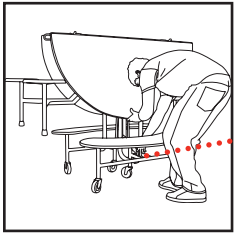


STEP 1
Disengage storage latch to release table from storage position. Grasp table edge, pull outward.

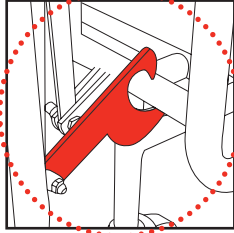


Close-up of storage latch.

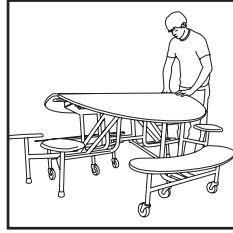

STEP 2
Gently lower table down and push out on benches/stools until safety stop engages. Position table as desired.

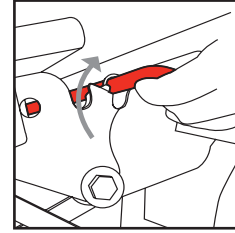


STEP 3
Lift up on tabletop slightly while raising the Lock Rod toward the tabletop to release from the safety latch position.

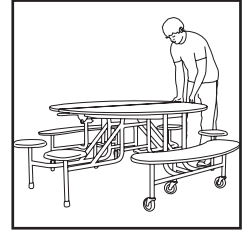


STEP 4
Lower the table to open position until the lock engages.


TO CLOSE TABLE FOR STORAGE POSITION

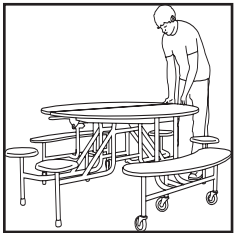


STEP 1
Locate the Lock Rod with one hand and place other hand on table edge.

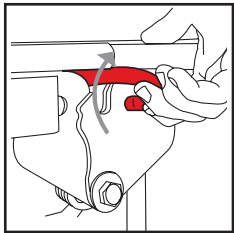

STEP 2
Slightly push down on tabletop while raising the Lock Rod toward the tabletop to release safety lock position.

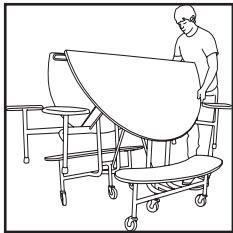

STEP 3
To close, grasp edges of table and pull upward in a continuous motion. Once folded flat, latch the storage lock.

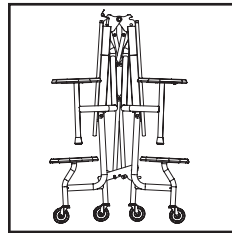

STEP 4
Table shown in storage position.



Customer Service 800-788-1028

As part of Palmer Hamilton's on-going commitment to quality, product specifications, changes, or modifications may be made without prior notice. **Warranty:** PALMER HAMILTON warrants that its products shall be free from defects in original material and workmanship for a period of fifteen years from the original shipment date. This warranty shall not apply to normal wear and tear or in the event products are damaged as a result of misuse, abuse, vandalism, neglect, accident, improper application, and modification or repair by persons not authorized by PALMER HAMILTON. The company will, at its discretion, repair or replace any defects. Any repair or replacement must be approved in advance by the factory before any action is taken. There are no implied warranties of fitness or merchantability, and there are no other express warranties beyond the warranties expressed here. 10/2010